



Order form

Roller blind system

CUSTOMER

Customer / Client-No.

Phone

Fax

Person in charge

Commission

RECEIVER'S ADDRESS

Messrs.

Address

Postal code Area

for the attn. of

Delivery date

DISPATCH

UPS

Truck

Pick up

Others

OFFER-NO.

Please indicate, if an offer has been submitted.

Stamp

Date Signature

ORDER *sundrapé® Quadro roller blinds are being made to measure and cannot be returned nor exchanged.*

Repeat! (If the fax has not been sent due to an error message)

Pos.	Customer pos.	Pcs.	Type no.	Roller blind width	Roller blind height	Colour (1) aluminium parts	Plastic parts black white	Drapery quality	Operating height (2)	Operating left right	Price
			S				<input type="checkbox"/> <input type="checkbox"/>			<input type="checkbox"/> <input type="checkbox"/>	
			S				<input type="checkbox"/> <input type="checkbox"/>			<input type="checkbox"/> <input type="checkbox"/>	
			S				<input type="checkbox"/> <input type="checkbox"/>			<input type="checkbox"/> <input type="checkbox"/>	
			S				<input type="checkbox"/> <input type="checkbox"/>			<input type="checkbox"/> <input type="checkbox"/>	
			S				<input type="checkbox"/> <input type="checkbox"/>			<input type="checkbox"/> <input type="checkbox"/>	
			S				<input type="checkbox"/> <input type="checkbox"/>			<input type="checkbox"/> <input type="checkbox"/>	

operating means (3)

- stainless steel chain
 cord

for mounting on casements

- clip support with screws
roller blind total width up to 1000 mm: 2 clip supports
roller blind total width up to 1500 mm: 3 clip supports (inclusive)
 clamp support




- SunTape side guiding,
self-adhesive into frame
(only rectangular)
 SunTape side guiding,
self-adhesive onto frame
(only rectangular)

Advices:

- (1) silver 9006 or white 9016
(2) without information = 0,8 x height of blind (rounding to 100 mm)
(3) without information = plastic ballchain colour according to plastic parts




(Information for taking measurements please see overleaf)

Planning advice

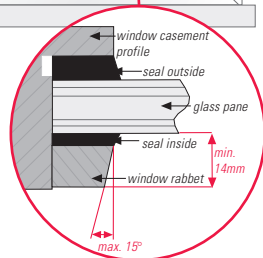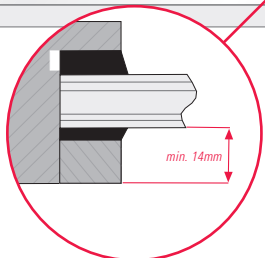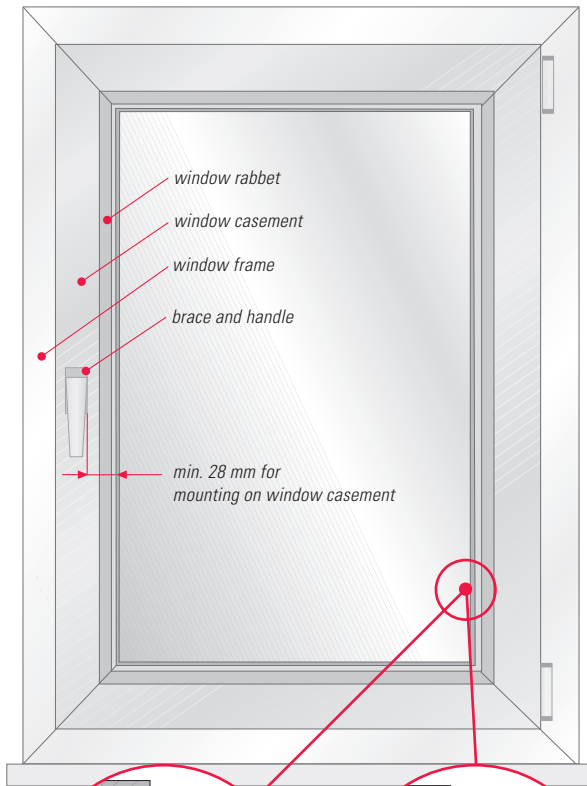


detail: rightangled window rabbet detail: sloping window rabbet

Mounting on casement

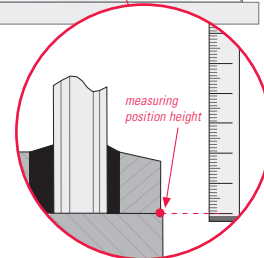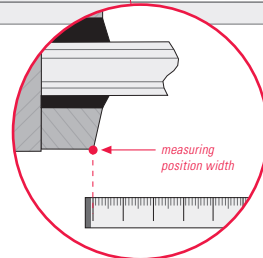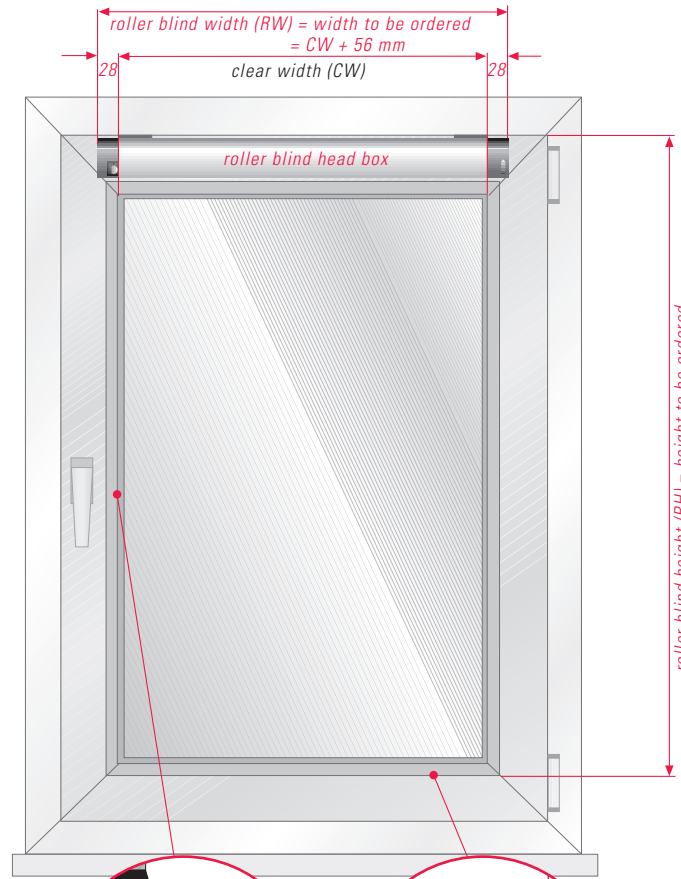

Please note: Take measurements always
 • in millimetres
 • twice, i. e. on top and bottom of the window
 • front edge of glass frame

Mounting between window rabbet

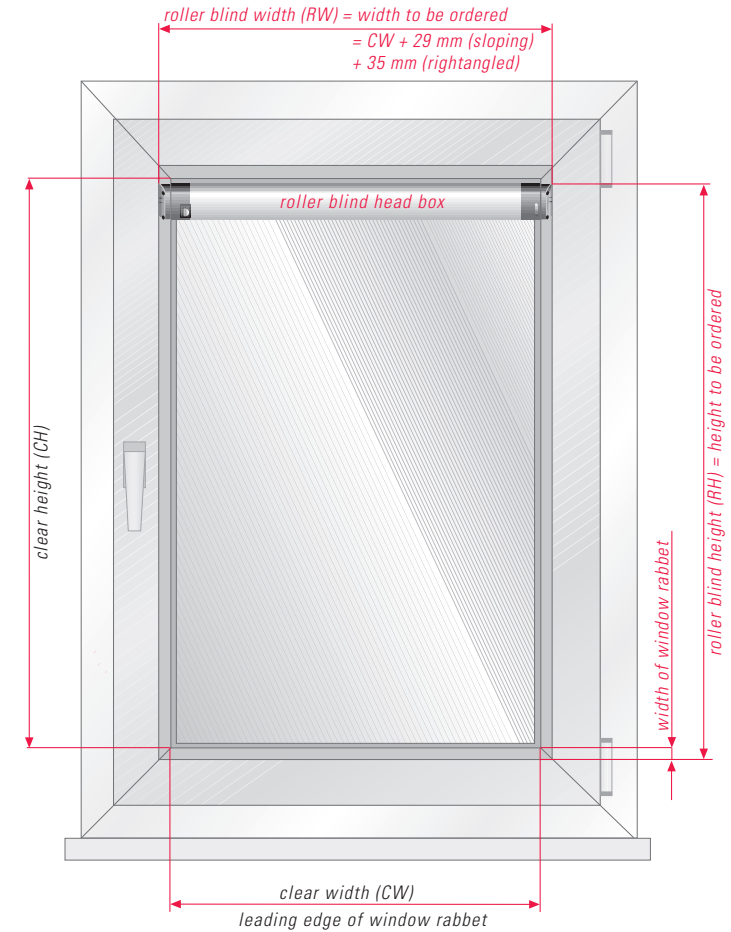

***rightangled window rabbet:**
 roller blind with cover: $RH = CW + \text{width of window rabbet}$
 roller blind with guiding rod: $RH = CH - 1 \text{ mm}$

***sloping window rabbet:**
 roller blind with cover: $RH = CH - 5 \text{ mm} + \text{width of window rabbet}$
 roller blind with guiding rod: $RH = CH - 10 \text{ mm}$